

**DATE:**            **December 5, 2000**  
**SUBJECT:**        **DataManager™ v4.0 Auto ID Feature**

Previous versions of the DataManager software -- when connected to a logger with modules already placed into any or all of its four input channels -- would automatically identify the modules plugged into the MDL unit. (This is our Auto ID feature.) The software then substituted the actual module IDs for what was plugged into the logger into the appropriate channels in the configuration window for easier programming of the logging units

This Auto ID Feature operates differently in DataManager v4.0.

DataManager v4.0 reads the existing configuration already in the MicroDataLogger (MDL) unit and displays it when the "Configure MDL" screen opens up. (IE: the configuration used on the unit's last deployment will come up.) **To have DataManager version 4.0 automatically identify the modules that are plugged into the MDL unit, click "Read Channels" in the configuration window.** The software then Auto IDs the modules and places them into the configuration window of the software.